

Reliability Analysis with Dynamic Reliability Block Diagrams in the Möbius Modeling Tool

Ken Keefe
Information Trust Institute
University of Illinois at Urbana-Champaign
Urbana, Illinois, USA
kjkeefe@illinois.edu

William H. Sanders
Department of Electrical and Computer
Engineering
University of Illinois at Urbana-Champaign
Urbana, Illinois, USA
whs@illinois.edu

ABSTRACT

Reliability block diagram (RBD) models are a commonly used reliability analysis method. For static RBD models, combinatorial solution techniques are easy and efficient. However, static RBDs are limited in their ability to express varying system state, dependent events, and non-series-parallel topologies. A recent extension to RBDs, called Dynamic Reliability Block Diagrams (DRBD), has eliminated those limitations. This tool paper details the RBD implementation in the Möbius modeling framework and provides technical details for using RBDs independently or in composition with other Möbius modeling formalisms. The paper explains how the graphical front-end provides a user-friendly interface for specifying RBD models. The back-end implementation that interfaces with the Möbius AFI to define and generate executable models that the Möbius tool uses to evaluate system metrics is also detailed.

Categories and Subject Descriptors

C.4 [Performance of Systems]: Reliability, availability, and serviceability; B.8.1 [Performance and Reliability]: Reliability, Testing, and Fault-Tolerance

Keywords

Reliability Modeling, Availability Modeling, Continuous Time Markov Chain Models, State-based Reliability Model, Möbius Atomic Model Formalism

1. INTRODUCTION

Reliability analysis is an essential part of critical system design and planning. Many methods exist to support such analysis, such as *reliability block diagrams* (RBD), *fault trees*, and *reliability graphs* [6][11]. These methods work well for limited cases.

However, those methods do not offer a way to handle dynamic behavior, such as how the failure of one component

impacts the behavior of the remaining elements. Common notions in system design, such as complex redundancy models (e.g., cold spares, warm spares, hot spares) and load balancing, are also not available in those approaches.

Dynamic Reliability Block Diagrams (DRBDs) [2] are a recent development that expands on reliability block diagrams to address those issues. DRBDs add model state to traditional RBDs to support dynamic change of component state over time. Adding state and time enables the use of state dependent expressions to offer time-dependent, rich redundancy, and load-balancing behaviors.

The primary contribution of this paper is a detailed discussion of a new implementation of the Dynamic Reliability Block Diagram formalism within the Möbius tool. Section 2 provides an introduction to reliability block diagrams and Dynamic Reliability Block Diagrams.

The Möbius modeling tool leverages a framework that enables multiple modeling formalisms, including compositional formalisms that flexibly connect multiple, diverse models into a single model. The framework provides several solution techniques, such as simulation and analytical solution to solve for metrics that are defined on the model. Möbius uses a well-defined abstract functional interface (AFI) [3] to allow for the addition of new modeling formalisms that can leverage the existing experimental and solution methods.

The remainder of this paper is organized as follows, Section 3 describes our implementation of DRBDs in the Möbius framework. Section 4 explains how the RBD formalism can be used effectively in Möbius. Section 5 details related tools that work with DRBDs or similar reliability models. Section 6 concludes the paper.

2. FORMALISM DEFINITION

The RBD formalism implemented by this work is very similar to the original dynamic reliability block diagram concept. To understand the subtle differences, we begin with our interpretation of the RBD formalism and then explain the details of the DRBD formalism.

2.1 Reliability Block Diagrams

RBDs offer a graphical representation of the reliability relationship of system components that expresses the overall system reliability. System analysts can easily define and

read RBDs.

Each RBD contains a start node, a stop node, a set of block elements that correspond to components in a system that independently fail at some rate, and connections that define the reliability relationship between the components and the system. When a component fails, its block becomes disabled. In order for a system to be considered operational, there must be at least one path through the RBD (from start to stop) that does not cross through a disabled block.

The diagram topology of an RBD can typically be decomposed into two connection classes:

- *Series* connections indicate a logical *OR* relationship. If any of the components in the serial connection fail, the entire system fails.
- *Parallel* connections indicate a logical *AND* relationship. If all of the components in the parallel connection fail, the entire system fails.

Direct combinatorial methods are available for evaluating the system reliability (or availability, if repair is defined) if the diagram is series-parallel, and the failure (and repair) rates are independently distributed.

2.2 Dynamic Reliability Block Diagrams

A Dynamic Reliability Block Diagram is a pair (C, N) . C is the set of components in the system. A component is a triple (S, F, R) . S is the current state of the component, either *Active* or *Failed*. F and R are failure and repair events, respectively. Each component event is a triple (T, E, R) . T is a state-based timing distribution. For example, a web server may fail at a faster rate if several other web servers in a load-balancing configuration have failed, as the traffic will spill over to the remaining web servers. E is the enablement of the event, either *true* or *false*. R is the resulting effects of the event executing. A component event is enabled based on its E and S . For example, a component in the *Failed* state cannot fail again, so the failure event is disabled. The R expressions are able to update the state of other components. For example, the failure of a repair robot may disable the *Repair* events on several components in a system.

N is the set of nodes that represent directed connections among components in the diagram. N must contain a unique start node and a unique stop node. Nodes can have zero or more incoming component connections and zero or more outgoing component connections. Those connections represent the same reliability relationship as defined in static RBD models. Specifically, the overall system state is considered operational if there exists a path from the start node to the stop node such that each component along the path has $S = \text{Active}$.

3. IMPLEMENTATION IN MÖBIUS

The Reliability Block Diagram atomic model formalism in the Möbius framework implements Dynamic Reliability Block Diagrams as defined in Section 2.2. The implementation

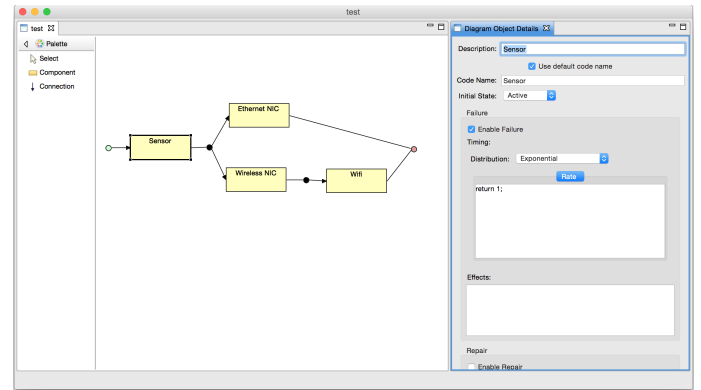


Figure 1: An example of the RBD atomic model editor.

provides a graphical front-end for defining RBD models. RBD model specifications are stored in a textual, XML format. Möbius uses the RBD implementation to generate C++ code from the XML specification; the code inherits from the formalism-specific, AFI-level C++ code that is part of the implementation and the Möbius framework.

3.1 RBD Atomic Model Editor

The Reliability Block Diagram atomic model editor is written in Java and leverages Eclipse libraries to offer a clean and user-friendly interface. The RBD atomic model editor uses the Eclipse Rich Client Platform (RCP) [7], which allows the inclusion of several other useful Eclipse projects. SWT [9] and JFace [5] provide a nice set of native widgets and dialogs. The Eclipse Graphical Editing Framework (GEF) [12] handles the actual drawing and editing of the diagram on a canvas. The Eclipse Modeling Framework (EMF) [15] is a meta-modeling and model code generation engine used widely by Eclipse and Eclipse-related projects. The RBD atomic model implementation uses EMF to define the code models that store a reliability block diagram atomic model. That allows the atomic model to integrate nicely with the existing Möbius tool. EMF also handles the persistence of RBD models in an XML-formatted file.

Eclipse RCP defines two top-level UI-components, editors and views. For the RBD atomic model editor (Figure 1), a new `GraphicalEditorWithFlyoutPalette` to handle the palette and diagram canvas was defined, as well as a new `ViewPart` to allow definition of details of components and nodes.

When a new RBD atomic model is created, a green node and a red node are automatically created and placed on the canvas. They are the start and stop nodes, respectively, of an RBD model. They cannot be deleted, but they can be moved if the default starting position is inconvenient.

On the left side of the editor window is a palette containing a selection tool, an add component tool, and an add connection tool. These tools are used to create and change an RBD diagram on the drawing canvas. These tools work as expected, with the exception of the connection tool which will be explained next.

To connect two components, the connection tool must first be selected from the palette. The source component should

be selected first, followed by the target component. When two previously unconnected components are connected, a new node is created along the path. These nodes are drawn as small black circles and make it possible to have multiple sources and multiple targets for each connection. The importance of nodes will be discussed in Section 3.3. Additional components can be added to the connection by following the above procedure and connecting the component directly to the node itself, or by connecting a component to another component already connected by the node's connection.

For example, in Figure 1, the connections among Sensor, Ethernet NIC, and Wireless NIC can be defined by using the connection tool on Sensor and then Ethernet NIC, followed by using the connection tool on the node between Sensor and Ethernet NIC and then the Wireless NIC. Alternatively, the second connection can be accomplished by using the connection tool on Sensor and then on the Wireless NIC. Depending on the order of connections made in an RBD model, several nodes may be created and then merged together. In the end, every component can have at most one incoming connection and at most one outgoing connection.

When a component is selected on the canvas, a Details view appears on the right side of the window. It is shown as the rightmost column in Figure 1. In the Details view, the user can define the name of a component, as well as its code name, which is the C++ object name by which this component can be referenced within any code expression. Both the name and code name must be unique, and the default behavior is for the code name to be automatically generated based on the name. The initial operational state of the component is next chosen as either *Active* or *Failed*.

Below that portion of the Details view, there are sections for defining the fail behavior and the repair behavior. In each section, there is a check box to indicate whether the behavior should initially be enabled. If it is not enabled, this event will not begin firing until the behavior has been enabled and the operational state of the component has been appropriately set (e.g., fail behavior requires the state to be *Active*). Next, a timing distribution can be defined from any of the general distributions that Möbius supports. The timing distribution will be sampled to find the firing time of this behavior's event. It is important to note that the parameters of the firing distribution can access the model state. For example, a set of load-balancing servers may fail at a faster rate if their workload increases because one of the other servers fails. Lastly, a C++ expression may be provided in the *Effects* text box. That code will execute after the component's state is updated by the fail/repair event. The effects can be used to alter other parts of the model state in a completely custom way. For example, it can be used to define a k of N failure model for several parallel devices by entering code that checks to see how many of its sibling components are still functional and manually fail a separate component block if the k threshold has been reached.

3.2 Möbius AFI Overview

The Möbius AFI is a set of base classes that all formalisms must inherit to integrate with the Möbius framework and tool [3]. These base classes have pure virtual functions, as

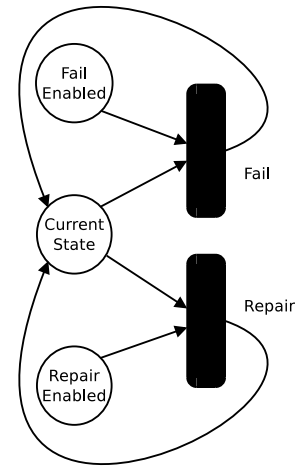


Figure 2: Graphical representation of the state variables and actions that model the failure and repair behavior of a component. Arcs represent preconditions and effects of an action.

defined by the implementation of object-oriented programming in C++, that must be defined by derived classes in a formalism. The Möbius AFI uses these virtual functions to interact in a well-defined manner with the derived classes [3]. The Möbius AFI defines a base formalism to which every atomic model formalism must provide a mapping. This formalism contains *state variables* and *actions*. State variables use basic C++ data types to store parts of model state.

The `BaseModelClass` defines a base class that all modeling formalisms must inherit from. A `BaseModelClass` contains objects that are state variables and actions that are part of the model. `BaseStateVariableClass` defines the C++ class that represents a state variable object in the base formalism. However, a derived class of `BaseStateVariableClass`, called `SharableSV`, can be used to enable the sharing of state variables across different models with varied formalisms. That is an important feature that enables state variable sharing model composition in Möbius, as explained in Section 4.1.

Actions in the Möbius AFI define events that change state variable values; those changes transition the model from state to state. An action has an enabling predicate, a firing time distribution (which may be instantaneous), an input function, and an output function. The enabling predicate determines in which model states an action can begin and continue firing. The input and output functions are used to update the model state. `BaseActionClass` is the base class for all actions in Möbius.

3.3 RBD AFI Implementation

The `RBDModel` class inherits from the `BaseModelClass`. The `RBDModel` class contains all of the state variables and actions that are used in a Dynamic Reliability Block Diagram atomic model. It contains a set of `Component` state variable objects, a set of `Node` state variable objects, a set of `FailRepairEnabledSV` state variable objects, and a single `ResetPathExplorationSV` state variable object. All state variables in a Dynamic Reliability Block Diagram atomic model are derived from the `SharableSV` base class.

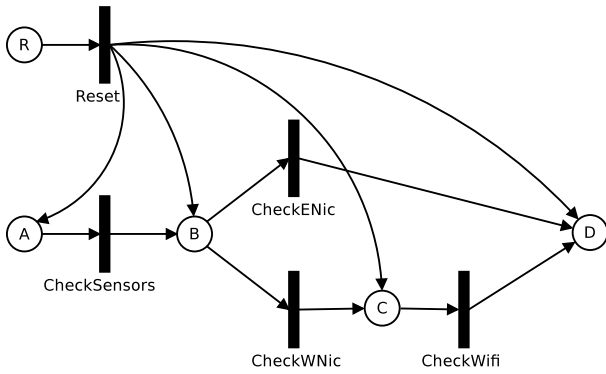


Figure 3: Graphical representation of the state variables and actions that represent the paths of the example model seen in Figure 1. The state variables and actions for component failure and repair have been omitted for clarity. Arcs represent preconditions and effects of an action.

The `RBDModel` also contains a set of `ComponentFail` action objects, a set of `ComponentRepair` action objects, a set of `CheckComponent` action objects, and a single `ResetPathExploration` action object. All actions in an RBD model are derived from `BaseActionClass`.

In Figure 2, we see the state variables and actions that define a single component’s repair and failure behaviors. In the figure, each circle is a state variable containing a `short int` value, and the black rounded boxes represent timed actions. There are separate timed events for fail and repair. In order for the fail action to be enabled, the `FailRepairEnabledSV` state variable called `FailEnabled` must equal 1, and the `Component` state variable, called `CurrentState`, must equal `Component::ACTIVE`. In order for the repair action to be enabled, the `FailRepairEnabledSV` state variable called `RepairEnabled` must equal 1, and the `Component` state variable, called `CurrentState`, must equal `Component::FAILED` (see Table 2). Upon completion of the firing of the `Fail` or `Repair` action, the `CurrentState` state variable is updated appropriately, and the `RBDModel`’s `ResetPathExplorationSV` is set to 1. The need for this state variable will be explained shortly.

Figure 3 illustrates the state variables and actions that are used to explore the paths of the example reliability block diagram model from Figure 1. Each circle represents a state variable containing a `short int`, and the thin black rectangles represent instantaneous actions. This structure is used to determine the overall system state. A complete picture would include multiple instances of the diagram from Figure 2, one for each component in the RBD, but those have been omitted to reduce the complexity of the diagram.

In Figure 3, there is a single `ResetPathExplorationSV` state variable object, labeled simply `R`. Next to it is the single `ResetPathExploration` instantaneous action, labeled `Reset`. That action is enabled and fires instantaneously when `R` equals 1. Upon execution, the value of `R` is set to 0, the value of all the other state variables in the diagram are set to 0, except for the state variable labeled `A`, which is set to 1. The `ResetPathExploration` action resets a path exploration process that will happen instantaneously.

The state variables, other than `R`, are all `Node` objects, and they indicate whether the current node in the RBD is reachable from the start node. In Figure 3, `A` is the start node, and `D` is the stop node in the RBD. The actions, other than `Reset`, are all `CheckComponent` actions, one for each component in the RBD. Although it is omitted from the figure for clarity’s sake, each `CheckComponent` action should also have an incoming arc from a `Component` state variable for its component. A `CheckComponent` instantaneous action is enabled when the incoming `Node` is 1, the outgoing `Node` is 0, and the `Component` state variable associated with the current state of the component is 1 (which indicates that the component’s state is `Active`). When the `CheckComponent` action fires, it sets the outgoing `Node` to 1. That allows a path exploration to occur across the topology of the RBD in order to determine if there is still an active path from the start node to the stop node. Because the `R` state variable is set to 1 **every** time a `Fail` or `Repair` action fires, the path exploration gets updated whenever a component’s state changes. To determine the overall system state, one must simply check the value of the stop `Node`.

4. USING RBD MODELS IN MÖBIUS

To access the state variables in an RBD model, a user must know the RBD element code names (defined in the Details view in the graphical editor) in conjunction with several member function names. The names of the `Component` state variables shown in Figure 2 are identical to the code names defined on the component. The fail and repair state variables in Figure 2 are respectively named:

- `<Component Code Name>FailEnabled`
- `<Component Code Name>RepairEnabled`

The names of the `Node` state variables in Figure 3 are identical to the code names defined on the node in the graphical editor. All state variables are in scope for all code expressions defined in the graphical editor.

<code>// Gets the current state of the component. short int getState()</code>
<code>// Sets the current state of the component. void setState(short int state)</code>
<code>// Returns true if the fail event is enabled. bool isFailEnabled()</code>
<code>// Enables/disables the fail event. void setFailEnabled(bool enabled)</code>
<code>// Returns true if the repair event is enabled. bool isRepairEnabled()</code>
<code>// Enables/disables the repair event. void setRepairEnabled(bool enabled)</code>

Table 1: Useful member functions for `Component` class.

<code>// Component is in the active state. short int Component::ACTIVE = 1</code>
<code>// Component is in the failed state. short int Component::FAILED = 0</code>

Table 2: Useful constants.

Several useful member functions have been added to the `Component` and `Node` classes. Table 1 lists the member functions on a component object. For example, if the sensor

```
// Whether node is reachable from the start.
bool isReachable()
```

Table 3: Useful member functions for Node class.

component in the example in Figure 1 had a code name, `sensor`, then we could determine if the failure event for that component was enabled by considering the return value from `sensor->isFailEnabled()`. In the case of the functions that deal with fail/repair enabled state, it is important to note that those refer to the state of the `FailEnabled/RepairEnabled` state variables shown in Figure 2. The `ComponentFail` action in Figure 2 requires the `FailEnabled` state variable to be 1 **and** the `CurrentState` state variable to be 1 (`Component::ACTIVE`) in order to be enabled. The requirements are similar for the `ComponentRepair` action.

Table 2 lists a set of class constants that are useful when one is working with the state of a component. `ACTIVE` indicates that a component is up and functioning properly. `FAILED` indicates that the component is down and that the path in the RBD is broken at the component’s block. Table 3 contains a description of the `isReachable()` function on `Node` objects, which determines if an unbroken path exists from the RBD start to that node. To determine the state of the overall RBD model, calling the `isReachable()` function on the stop node (node D in the example in Figure 3) will suffice.

4.1 Composing RBD Models

The Möbius framework allows for easy composition of atomic and other composed models through sharing of state variables or synchronizing of events. Model composition with RBD models are a powerful way to expand the behavior of a RBD model or to incorporate RBD models in larger complex Möbius models. To properly compose an RBD model, the actions and state variables described in Section 3 must be carefully considered.

All of the state variables used in RBD models make use of a `short int` base data type and can be shared with places in a SAN model [14], or access, skill, knowledge, and goal elements in an ADVISE model [4], etc. For example, a component whose state behavior is too complicated to be described in an RBD model can be expressed in a SAN model. The SAN model can update the `FailEnabled`, `RepairEnabled`, and `CurrentState` state variables to mimic the change of component state from within the SAN model. That allows the remainder of the RBD model to continue functioning in harmony with the specialized component. Also, action synchronization can be leveraged so that a failure in an RBD model can be synchronized with an attack step in an ADVISE model to model the behavior of an adversary taking down a component.

4.2 Specifying Metrics

Möbius provides a reward model formalism called *performance variables* to specify model metrics. Performance variables can use rate reward functions to consider the value of any of the state variables mentioned earlier. For example, the average downtime of a system can be calculated by using a rate reward performance variable that examines the

state of the stop node. Impulse reward performance variables can be used to define metrics that track the firing of failure and repair events. For example, an impulse reward performance variable can be used to count the number of times a component fails.

4.3 Defining Studies

Studies in Möbius allow a user to design a set of experiments that vary parameters on a model. Global variables are used to specify a model parameter. The RBD atomic model uses the global variable feature of Möbius. Any of the code expressions in an RBD model, including the failure/repair timing distribution parameters and failure/repair effects, can use functional expressions using global variables. For example, by setting the component’s failure timing distribution to use a global variable as its rate, we can define different failure rate values for different experiments in the study.

4.4 Solution Techniques

Möbius provides a discrete event simulator to solve model metrics using iterative simulation. To do so, Möbius links together C++ libraries that are generated for an RBD model instance with RBD formalism libraries in the Möbius AFI. Similarly, libraries are built for the composed model, reward model, and study. Finally, Möbius links those together with the Möbius discrete event simulator to create an executable binary. The binary is executed by the graphical front-end and instructed to initialize the model state, begin execution, and continue until all metric times have been reached. The model is then reset to the initial state, and the execution is repeated many times. Each iteration gathers metric observations for a trajectory, and Möbius calculates statistics on the observed measures, e.g., mean and variance.

Alternatively, Möbius can build the model instance libraries and link them with a transformer library to create a state space generator that will generate a continuous-time Markov chain (CTMC) representation of the model. Möbius includes an array of analytical solvers that will solve the CTMC with much higher precision than the simulator. The transformer/analytical solution route places significant constraints on the model, such as a finite state space and exponential timing distributions. If those constraints cannot be met, the discrete-event simulator must be used instead.

More details on composed models, reward models, studies, and solution methods in Möbius can be found in the Möbius documentation [8].

5. RELATED TOOLS

Since the introduction of Dynamic Reliability Block Diagrams [2], several tools have incorporated DRBDs to study system reliability. We examined several of the tools during the formulation of our implementation.

The SHARPE toolkit [13] provides a nice collection of modeling formalisms, such as fault trees, queuing networks, Markov chains, and Dynamic Reliability Block Diagrams. SHARPE provides combinatorial solution methods for traditional RBDs and fault trees as well as analytical solution methods for Dynamic Reliability Block Diagrams similar to what is done in

Möbius. SHARPE is able to hierarchically compose models together, which can yield a significant reduction of state space for Markov chain solutions by decomposing a model into parts that can use combinatorial solutions, and parts that require analytical solution techniques. SHARPE does limit the topology of DRBDs and does not allow non-series-parallel nor cyclical DRBD models, which our implementation does allow.

PTC provides a commercial tool called Windchill that includes an RBD module [10]. PTC's Windchill RBD is a graphical tool for creating and analyzing DRBD models. The tool provides a user-friendly interface, but lacks the flexibility and customization that Möbius affords with its model composition and reward model specification. For example, Windchill RBD asks users to select from a list of predefined metrics, while Möbius allows users to express a wide range of metrics with its performance variables formalism. Windchill RBD uses analytical solution techniques and simulation to solve for specified metrics.

ReliaSoft offers a tool called BlockSim [1] that uses DRBDs and dynamic fault trees to perform maintainability and availability analysis. Like Möbius and Windchill, BlockSim uses analytical solution and simulation to calculate system measures. Also as in Windchill, the metrics that can be defined are constrained by a predefined list for the purpose of maintaining user friendliness.

Although several tools exist for modeling and solving DRBDs, we feel that our implementation offers greater utility because of its use of the Möbius framework, which offers significantly greater flexibility to the definition and solution of complex models.

6. CONCLUSION

The main contribution of this paper is the in-depth explanation of the implementation of the Dynamic Reliability Block Diagram atomic formalism in Möbius. This implementation offers a graphic interface for easy definition of reliability block diagrams that have model state that changes over time, state-dependent behavior, and more complex component behavior, such as load balancing and nontrivial redundancy. The incorporation of the DRBD implementation in the Möbius framework allows for composition of DRBD models with other Möbius models and leverages the mature solution techniques already existing in Möbius. This improvement to the Möbius tool will significantly enhance its offerings for system reliability analysis.

7. ACKNOWLEDGMENT

The authors would like to acknowledge the contributions of current and former members of the Möbius team and the work of outside contributors to the Möbius project. We also thank Jenny Applequist for her editorial contributions.

8. REFERENCES

- [1] R. Corporation. Reliability block diagram software (rbd software tool) and fault tree analysis software (fta software tool) for system reliability and maintainability analysis, 2014.
- [2] S. Distefano and L. Xing. A new approach to modeling the system reliability: dynamic reliability block diagrams. In *Reliability and Maintainability Symposium, 2006. RAMS '06. Annual*, pages 189–195, Jan 2006.
- [3] J. M. Doyle. Abstract model specification using the Möbius modeling tool. Master's thesis, University of Illinois at Urbana-Champaign, Urbana, Illinois, January 2000.
- [4] M. Ford, K. Keefe, E. Lemay, W. Sanders, and C. Muehrcke. Implementing the advise security modeling formalism in Möbius. In *Dependable Systems and Networks (DSN), 2013 43rd Annual IEEE/IFIP International Conference on*, pages 1–8, June 2013.
- [5] R. Harris. *The Definitive Guide to SWT and Jface*. Apress, Berkeley, CA, USA, 2nd edition, 2007.
- [6] B. Johnson. *Design and Analysis of Fault-tolerant Digital Systems*. Addison-Wesley series in electrical and computer engineering. Addison-Wesley Publishing Company, 1989.
- [7] J. McAffer, J.-M. Lemieux, and C. Aniszczyk. *Eclipse Rich Client Platform*. Addison-Wesley Professional, 2nd edition, 2010.
- [8] Möbius Team. *Official Möbius Documentation*. University of Illinois at Urbana-Champaign, Urbana, IL, 2014.
- [9] S. Northover and M. Wilson. *SWT: The Standard Widget Toolkit, volume 1*. Addison-Wesley Professional, first edition, 2004.
- [10] I. PTC. Ptc windchill | product lifecycle management (plm) software | ptc, 2014.
- [11] M. Rausand and A. Høyland. *System Reliability Theory: Models, Statistical Methods, and Applications*. Wiley Series in Probability and Statistics - Applied Probability and Statistics Section. Wiley, 2004.
- [12] D. Rubel, J. Wren, and E. Clayberg. *The Eclipse Graphical Editing Framework (GEF)*. Eclipse Series. Pearson Education, 2011.
- [13] R. A. Sahner and K. Trivedi. Reliability modeling using sharpe. *Reliability, IEEE Transactions on*, R-36(2):186–193, June 1987.
- [14] W. H. Sanders and J. F. Meyer. Stochastic activity networks: Formal definitions and concepts. In E. Brinksma, H. Hermanns, and J. P. Katoen, editors, *Lectures on Formal Methods and Performance Analysis*, volume 2090 of *Lecture Notes in Computer Science*, pages 315–343, Berg en Dal, The Netherlands, 2001. Springer.
- [15] D. Steinberg, F. Budinsky, M. Paternostro, and E. Merks. *EMF: Eclipse Modeling Framework 2.0*. Addison-Wesley Professional, 2nd edition, 2009.

[1] R. Corporation. Reliability block diagram software (rbd software tool) and fault tree analysis software